



TERMIGNONI s.r.l.

Via della Rampina 16
15077 Predosa – Italy
www.termignoni.it





Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

INSTRUCTIONS 1/3

Y077

Yamaha R6 '06-'09

1 SIL GP

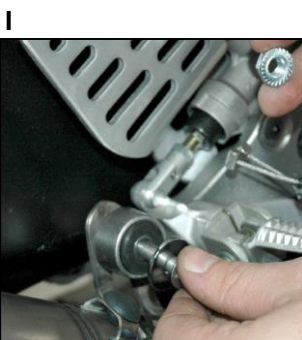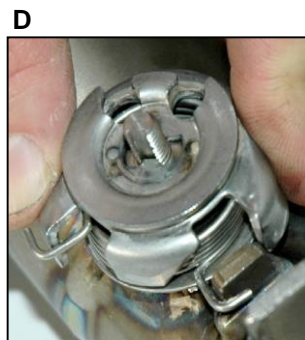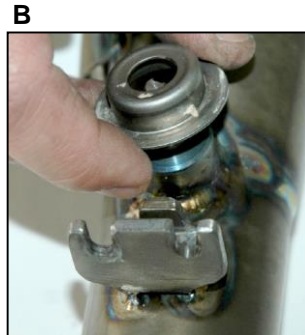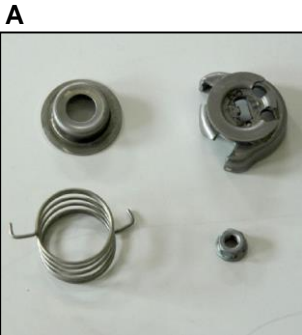

MOUNTING THE TERMIGNONI SILENCER

- Dismount from the original valve the parts as shown in Fig.A
- Mount them onto the valve of the Termignoni silencer following Fig.B, C & D, position the spring correctly.
- Put the nut in place and tighten to complete the mounting of the valve (Fig.E)
- Un tighten the right hand passenger footrest and using the original nut M6 and bolt M6x40 (supplied) fix the silencer bracket support. (Fig.F & G).
- Mount the silencer onto the motorbike, and using the rubber ring fix it to the support bracket using the screw M6x20, washers M6x12 and flanged nut M6 (all supplied) (Fig. H).
- Fix the silencer also with the front bracket using the original screws, washers and nuts (Fig. I).



TERMIGNONI s.r.l.

Via della Rampina 16
15077 Predosa – Italy
www.termignoni.it







Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

INSTRUCTIONS 2/3

Y077

Yamaha R6 '06-'09

1 SIL GP

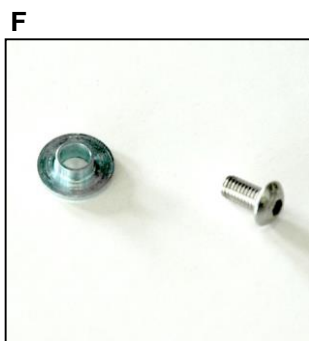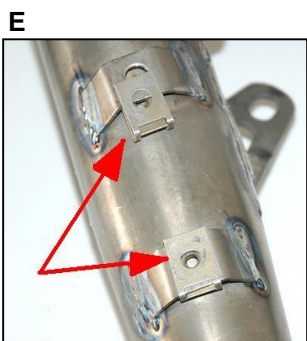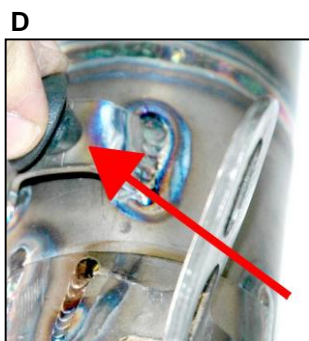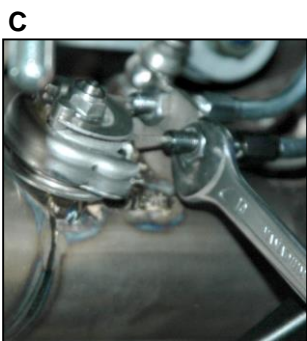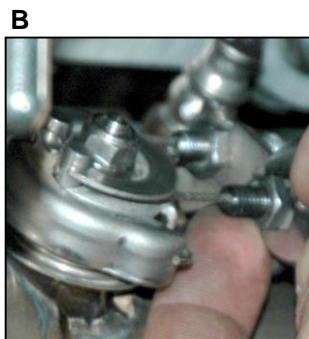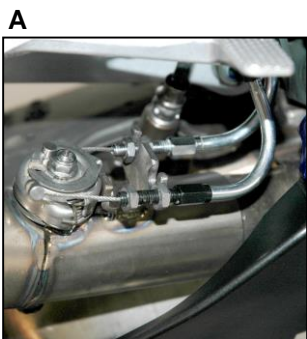

HEAT SHIELD PROTECTION

- Connect the valve command wires (Fig.A & B) then adjust the tension of the wires to consent the correct functioning (Fig.C).
- Insert the rubber cap (supplied) as in photo (Fig.D).
- Position the ARAMID washer M8x16 on the inside of the carbon burn shield (supplied) and mount as in (Fig.G) using the brushings, screws M5x16 and WURTH M5 clips (supplied) (Fig.E & F).



TERMIGNONI s.r.l.

Via della Rampina 16
15077 Predosa – Italy
www.termignoni.it

Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

PACKING LIST 3/3

Y077

Yamaha R6 '06-'09

1 SIL GP

- 1) N° 1 SILENCER **Y077** with valve
- 2) N° 1 SILENCER RING HOLDER WITH RUBBER **TY094**
- 3) N° 1 CARBON HEAT SHIELD **TY094**
- 4) N° 1 SUPPORT STIRUP SIL **TY086**
- 5) N° 2 WURTH CLIPS **M5**
- 6) N° 2 HEXAGON SOCKET BUTTON HEAD CAP SCREWS **M5X16**
- 7) N° 2 WASHERS **M6X12**
- 8) N° 1 HEXAGON SOCKET BUTTON HEAD CAP SCREW **M6X20**
- 9) N° 1 SELF-LOCKING NUT **M6**
- 10) N° 1 HEXAGON SOCKET HEAD SCREW **M6X40**
- 11) N° 1 FLANGED NUT **M8**
- 12) N° 2 ARAMID WASHERS **M8X16**
- 13) N° 2 BUSHINGS **TD079**
- 14) N° 1 RUBBER CAP **TER077**

